
Cover systems

Form 1



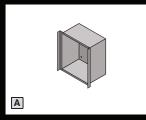

Device module

For use in air circuit breaker outgoing/incoming sections with a minimum depth of 600 mm. The removable mounting plate may be used for the configuration e.g. of fuses, power circuitbreakers and switchgear.

Material:

- Side parts, centre parts: Sheet steel
- Mounting plate: Sheet steel, zinc-plated
- Front panel: Aluminium, anodised

Side parts, centre parts: RAL 7035

Supply includes:

- 2 side parts
- 2 centre parts
- Connector parts
- Mounting plate
- Optional front panel


Note:

Please observe the manufacturer-specific data regarding the arcing space of air circuit-breakers.

Design of front panel	For enclosure width mm		Mounting plate		Packs	Model No. SV	Dogo
Design of front panel	600	800	Width mm	Height mm	of	woder No. 5v	Page
without	•	_	420	250	1	9660.700	
	-	-	620	250	1	9660.710	
vertically hinged	•	-	420	250	1	9660.760	
	-	-	620	250	1	9660.770	
Also required					•		
Mounting bracket ¹⁾					24	9660.090	344

^{1) 4} mounting brackets are required to attach a device module.



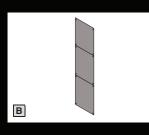

Contact hazard protection cover

For SV-TS 8 enclosures with air circuit-breaker

To cover incoming and outgoing sections and NH slimline fuse-switch disconnectors with the Maxi-PLS busbar system in the rear enclosure section so that they are safe from finger contact (IP 2X).

Material:

Sheet steel

Colour:

RAL 7035

Supply includes:

3 front covers

Note:

- Cut-outs for air circuit-breakers must be provided by the customer.
- SV-TS 8 enclosures, see page 84.

			For 1-doo	or enclosures			
Width mm		Height	Device module version		Doolso of	Model No. SV	Dono
600	800	mm	with	without	Packs of	woder No. Sv	Page
•	-	2000	-	-	1 set	9660.280	
•	-	2000	-	-	1 set	9660.780	
-	-	2000	-	-	1 set	9660.380	
-	-	2000	-	-	1 sets	9660.880	
Also require	d						
Mounting bracket ¹⁾				24	9660.090	344	

			For 3-doo	or enclosures			
Width mm		Height	Device module version		Packs of	Model No. SV	Dogo
600	800	mm	with	without	Packs of	woder No. 3V	Page
•	-	2000	•	-	1 set	9660.290 ²⁾	
•	-	2000	-	•	1 set	9660.790	
_	-	2000	•	-	1 set	9660.390 ²⁾	
_	-	2000	-	•	1 set	9660.890	
Also require	d						
Mounting bracket ¹⁾					24	9660.090	344

^{1) 12} mounting brackets are required to attach the contact hazard protection cover plates.

²⁾ Including trim panel